

OMRON CONTROLLER

(A/R-HEATER KIT 201310; HOSE HEATER KIT 201312)

1. Press and hold the \uparrow or \downarrow to increase or decrease the material temperature set-point to the desired value as determined by the material supplier or application conditions.

-The display example shows a current temperature of 69.

-Note that the yellow "OUT" bar indicates that current is being sent to the heater.

-The display example shows a set point of 120F.

NOTE- The 3 buttons on the left of the controller are <u>never</u> used for operation and should <u>not</u> be pushed. They are only used by the factory for initial programming of the controllers. Pushing these buttons will alter the controller program values causing incorrect equipment function.

AUTONICS CONTROLLER

(A/R-HEATER KIT 201310; HOSE HEATER KIT 201312)

- To operate the controller, confirm that the OUT1 in the top left is on and an ambient temperature is on the left of the controller.
- To change the set value of the controller, press the ↑ or ↓ button this will change the green number on the right of your controller.



3. To enter manual mode press the **[MODE]** button. When you see an **H** pop up in the set value on the right of the screen you are setting your manual set percentage. Use the \uparrow or \downarrow buttons to change that value.



DIGITAL TEMPERATURE CONTROLLER OPERATION AND INSTALLATION


Wiring the Omron Controller

Controller	Hose HTR	R- HTR	A-HTR	
	201312	201310	201310	
Pin 1	Wire 18	Wire 18	Wire 18	
Pin 2	Wire 19	Wire 19	Wire 19	
Pin 3	Wire 38 +	Wire 35 +	Wire 32 +	
Pin 4	Wire 37 -	Wire 34 -	Wire 31 -	
Pin 11	TC Red Wire -	TC Red Wire -	TC Red Wire -	
Pin 12	TC Purple Wire +	TC Purple Wire +	TC Purple Wire +	



Wiring the Autonics Controller

	tring the reasones contro			
Controller	Hose HTR	R- HTR	A-HTR	
Pin 5	Wire 18	Wire 18	Wire 18	
Pin 6	Wire 19	Wire 19	Wire 19	
Pin 3	Wire 38 +	Wire 35 +	Wire 32 +	
Pin 4	Wire 37 -	Wire 34 -	Wire 31 -	
Pin 8	TC Purple Wire +	TC Purple Wire +	TC Purple Wire +	
Pin 7	TC Red Wire -	TC Red Wire -	TC Red Wire -	

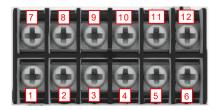

Wiring the Eaton Controller

Controller	Hose HTR	R- HTR	A-HTR
Pin 1	Wire 18	Wire 18	Wire 18
Pin 2	Wire 19	Wire 19	Wire 19
Pin 5	Wire 38 +	Wire 35 +	Wire 32 +
Pin 6	Wire 37 -	Wire 34 -	Wire 31 -
Pin 9	TC Purple Wire +	TC Purple Wire +	TC Purple Wire +
Pin 10	TC Red Wire -	TC Red Wire -	TC Red Wire -

